



USE AND CARE GUIDE

GAZEBO 10 FT X 20 FT

PACKAGE CONTENTS



A - Canopy Top x1



B - Frame x1



C - Utility Hooks x8



D - Skate Wheel bag x1



E - Guy Rope x4



F - Weight Bag x6



G - Hex wrench
(for maintenance only) x1



H - Stake x10



I - 4" PU Wheel x2




J - Screw Sleeve x2

SETTING UP THE CANOPY

1 ATTACHING THE CANOPY

- With a partner, start on the narrow side and tangle across from each other. Open the frame at least 50% open.
- Unfold the canopy (A) and place on top of the canopy frame (B)
- Secure the canopy (A) to the corners of the canopy frame (B) using the hook and loop straps.

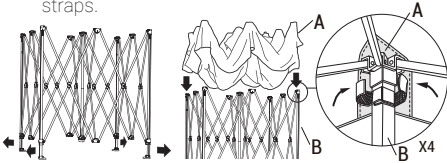


TIPS:

Lift up the frame 2"-3" off the ground especially in tall grass or sand. Grasp the trusses away from the connections to avoid pinching. Get the frame 50% opened.

2 EXPAND THE FRAME

- Grasp the middle trusses on the bottom marked "OPEN HERE". Lift slightly off the ground and walk back spreading the trusses open.

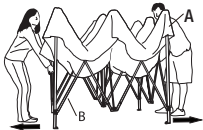


TIPS:

Get the frame 80%-90% opened.


3 LOCKING THE FRAME

- Lock each corner until you hear "CLICK".
- Secure the canopy top with webbing straps by wrapping over the trussbars. Secure the canopy top with webbing straps by wrapping over the trussbars.

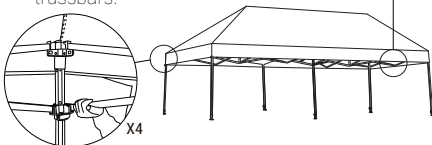

4 ADJUSTING THE CANOPY HEIGHT

- With your partner at the long side to raise the canopy by sliding the lower inner leg until the leg push button locks at the desired height.
- Repeat the above on the opposite side.

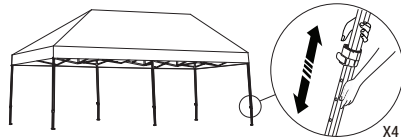


TIPS:

Do not keep your foot on the footplate while extending the leg.

5 SECURING THE CANOPY IN PLACE

- Insert a stake (H) into the foot of each canopy leg
- Measure out each leg to a proper distance and secure four stakes (H) to the ground. Attach the ropes to the canopy top and tie the attached ropes to the stakes in the ground. Ensure the ropes have the proper tension by adjusting the plastic adjusters on the ropes.

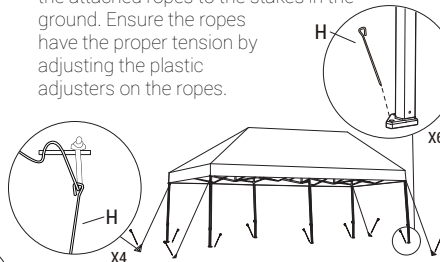

TIPS:

Always secure your canopy with the guy ropes and stakes.


CARE AND SAFETY INSTRUCTIONS

Do not erect your gazebo in inclement weather, i.e. wind or rain. Ensure you erect the gazebo on a level surface free of any potential hazards. Be sure to erect your gazebo on a surface where all the gazebo legs and guy ropes can be fixed firmly into the ground.

TAKING DOWN THE CANOPY

1 REMOVING THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground.
- Press the push button to lower all legs.

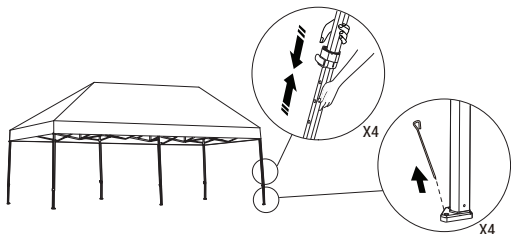


2 UNLOCKING THE CANOPY

- From underneath the canopy, releasing all the webbing straps. Press in the red lock button on the leg assembly.






3 FOLDING THE FRAME

- Lift the canopy off the ground 2-3 inches and walk it in from both sides until the frame is fully closed.

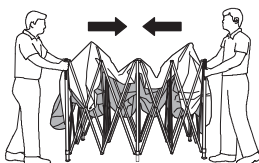

4 PACKING THE CANOPY IN THE STORAGE BAG

- Slide down the bag over the closed frame. Then slide metal plate underneath foot pad leg. Tighten the inside Velcro firmly.
- Zip the bag closed. Secure the frame with the buckle and tighten the strap.
- Attach the screw sleeve to the wheel alex.
- Insert each wheel axel into the hole provided on the metal plate. Lock the wheel tight with the provided hex wrench.

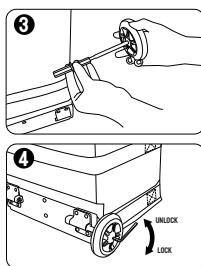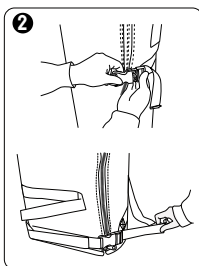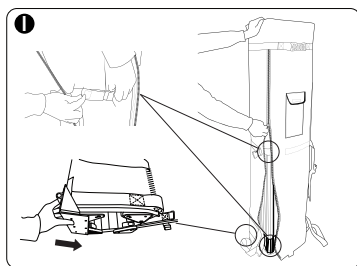



WARRANTY

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.

WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

SPARE PARTS

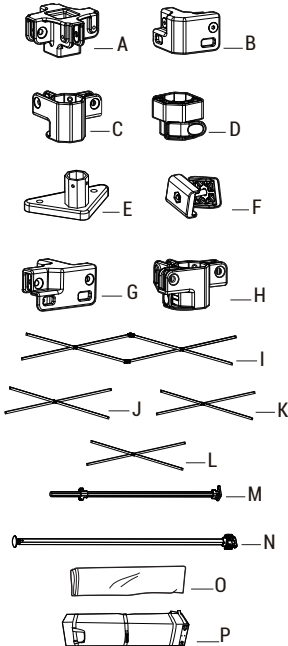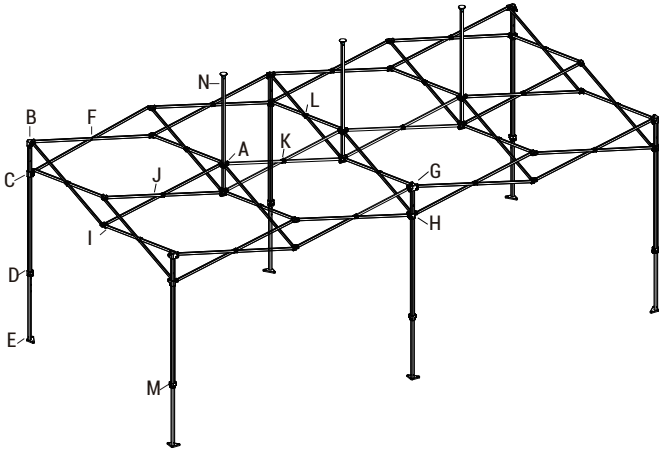

PART	DESCRIPTION	REFERENCE NO.
A	Central Slider	M0CS01BK00
B	Leg Cap-40 Oct	M0LC12BK2W
C	Slider-40 Oct	M0LS12BK2W
D	Leg Extender	M0LE12BK6P
E	Foot	M0FT12BKNW
F	M6 Bolt Kit	UNBKM6BK LX
G	Middle Leg Cap-40 Oct	M0LC12BK3W
H	Middle Slider-40 Oct	M0LS12BK3W
I	Long Eave Assembly	MLEA10WH00
J	Long Ceiling Assembly	M0CA10WH00
K	Short Ceiling Assembly	CICA10WH00
L	Eave Assembly	M0EA10WH00
M	Leg Assembly No wheel	M0LA12WHNW
N	Central Tube	M0CT40WHCL
O	Top Fabric-White	UNT410WH20
	Top Fabric-Blue	UNT410BL20
	Top Fabric-Grey	UNT410GY20
P	Wheeled Bag	UNWB20BKSW



NEED ASSISTANCE?

Please contact our customer service team.



Service@crownsadesusa.com

Toll Free (888) 877-6789

Mon-Fri 9:00 AM - 5:00 PM PST



www.crown-outdoor.com