


SETTING UP THE CANOPY


1 OPENING THE CANOPY FRAME

- With a partner, stand across from each other.
- Grasp a truss at the top of the frame (A) and the other truss at the bottom, as shown. Lift slightly off ground and step backwards while squeezing trusses together.

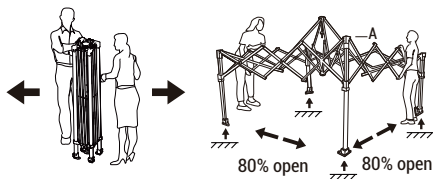


6 ADJUSTING THE CANOPY HEIGHT

- Lift up one side. Grasp the outer or upper leg with one hand and pull out the inner leg with the other.
- Extend until the button engages.
- Set legs to desired height.

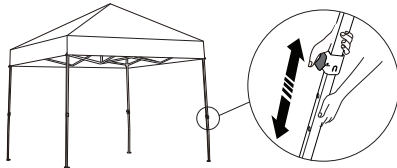


2 ATTACHING THE CANOPY

- Unfold the canopy (B) and place on top of the frame (A).
- Slide the EZ clip tab over the knob to secure the top tightly.
- Secure the canopy (B) to the corners of the frame (B) using the Velcro connections.

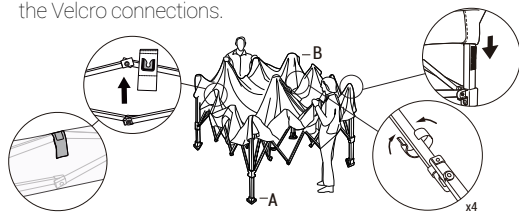


7 SECURING THE CANOPY IN PLACE

- Insert a stake (H) into the foot of each canopy leg.
- Fill up the weight bags (E) with sand or gravel and simply use the hook and loop strap around each leg.

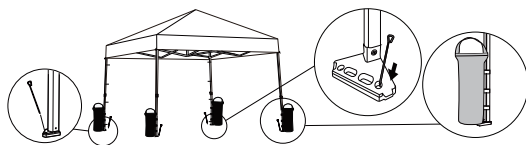


3 LOCKING THE FRAME

- Lift up one side of the frame (A) and walk under it.
- Place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.

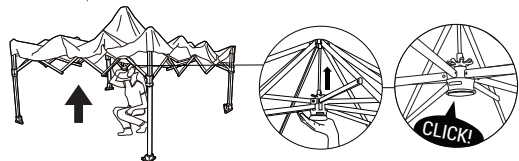

8 STO-N-GO WHEEL INSTALLATION


- Insert each wheel axle into the hole provided on two of the footplates.
- Lock the wheel tight with the provided hex wrench.

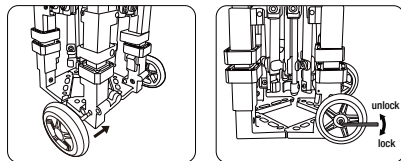

TAKING DOWN THE CANOPY


1 REMOVING THE SIDEWALL, THE WEIGHT POCKETS, THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground. Press the push button to lower all legs.

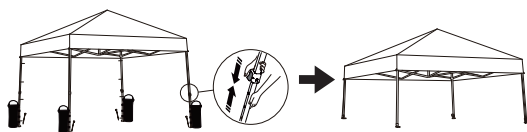


2 UNLOCKING THE CANOPY

- From underneath the canopy, press in the red lock button. Press in the red lock button. Pull down on the central hub until it is separated from the central pole.

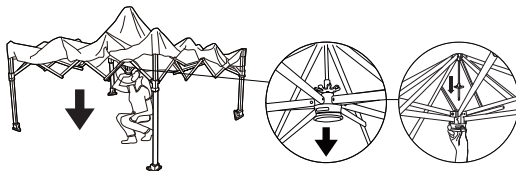


3 FOLDING THE FRAME

- Lift the canopy off the ground 2-3 inches and walk it in from both sides until the frame is fully closed.

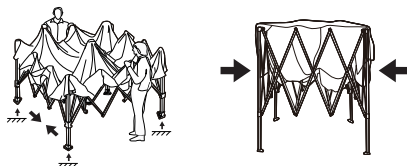

4 PACKING THE CANOPY IN THE STORAGE BAG

- Position the cover bag strap to align with the 2 wheeled legs. Slide down the bag over the closed frame. Zip the cover closed.
- Secure the frame with the buckle and tighten the strap.
- Insert red plug as shown. Tighten the strap by pulling down the strap loop.

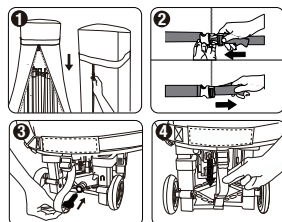


WARRANTY

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.


WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

SPARE PARTS

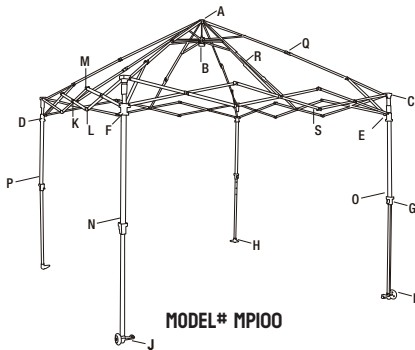

MODEL# MPI00

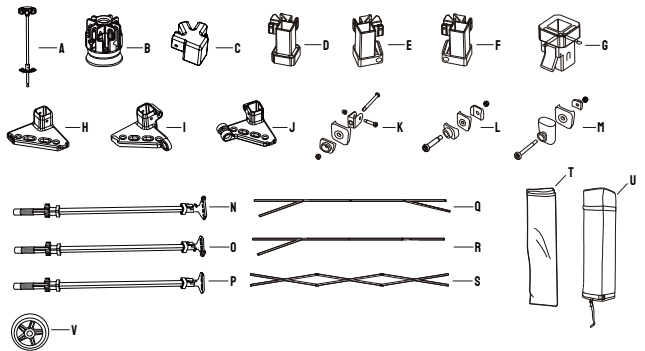

PART	DESCRIPTION	REFERENCE NO.
A	Central Pole	G0CP82BK08
B	Central Bottom Hub	GOCH00BK08
C	Leg Cap-30	UNLC12BKMI
D	Slider-30	UNLS12BK4W
E	Slider-30 W awning	UNLS12BKAW
F	Leg Assembly (No awning)	MALA12GYNA
G	Leg Extender	UNLE12BKHY
H	Plastic Foot Without Wheel	HCFT00BKNW
I	Plastic Foot (Right)	HCFT00BKRI
J	Plastic Foot (Left)	HCFT00BKLE
K	M5 Bolt Kit (A)	UNBKM5BKAA
L	M5 Bolt Kit (B)	UNBKM5BKBB
M	M5 Bolt Kit (C)	UNBKM4BKCS

PART	DESCRIPTION	REFERENCE NO.
N	Leg Assembly Without Wheel	MALA12GYMA
O	Leg Assembly (Left)	MALA12GYLE
P	Leg Assembly (Right)	MALA12GYRI
Q	Ceiling Assembly	MACA10GY00
R	Ceiling Assembly Support	MACA10GYCS
S	Eave Assembly	UNEA10GY00
T	Top Fabric-White	UNT410WH00
	Top Fabric-Blue	UNT410BL00
	Top Fabric-Gray	UNT410GY00
U	Carry Storage Bag	UNCB10BKST
V	4" PU Wheel	WH04BKPU00



NEED ASSISTANCE?

Please contact our customer service team.



Service@crownsadesusa.com



Toll Free (888) 877-6789
Mon-Fri 9:00 AM - 5:00 PM PST



www.crown-outdoor.com